


## Installing the HEPA air filter

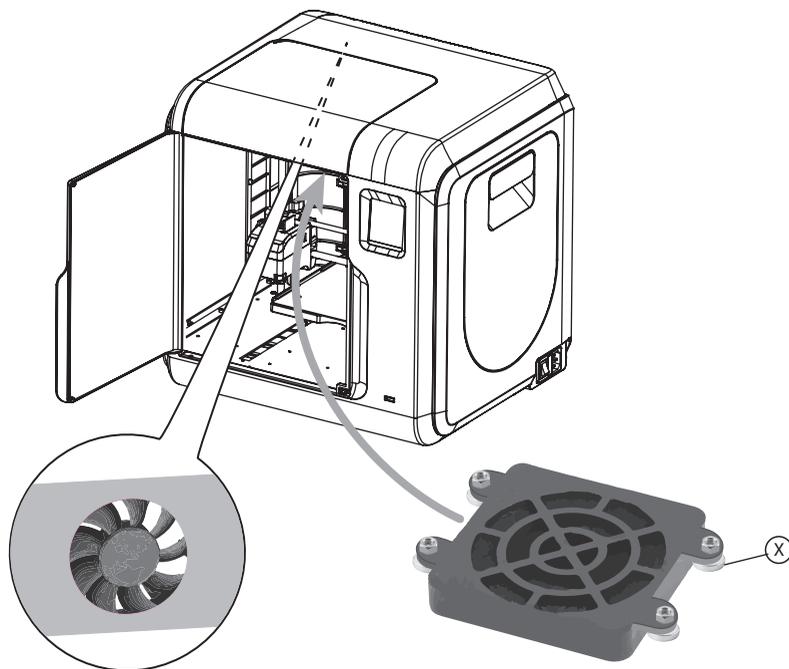

The printer is equipped with a fan located in the rear of the printer under the top cover. It is surrounded by a metal plate.

1. Turn the HEPA air filter so that the magnets (Y) point upwards.
2. Place the filter over the fan from below. With the magnets it will be fixed on the metal plate.

### Notes


Before inserting the extruder, make sure that it cannot be damaged during installation.

If necessary, move the extruder to a safe position using the control buttons.

German version on opposite page! · Deutsche Fassung umseitig!

Plus d'informations ou des traductions disponibles sur · Meer informatie of de beschikbare vertalingen onder  
Informazioni esaustive o traduzioni disponibili su · Información completa o traducciones disponibles en · Informações  
abrangentes ou traduções disponíveis em [www.bresser.de/P2080203](http://www.bresser.de/P2080203)

## HEPA-Luftfilter anbringen

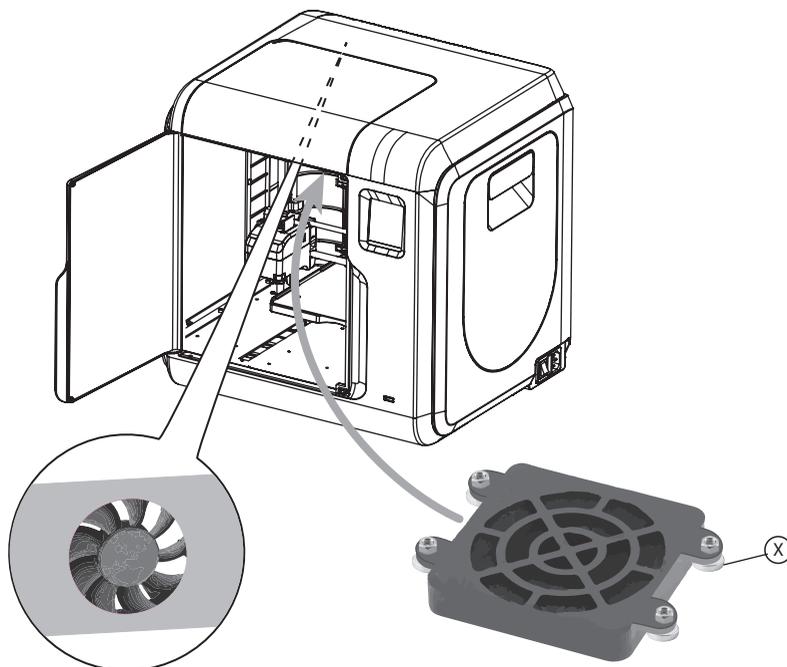

Der Drucker ist mit einem Lüfter ausgestattet, der sich im hinteren Teil des Druckers unter der oberen Abdeckung befindet. Er ist von einer Metallplatte eingefasst.

1. Den HEPA-Luftfilter so drehen, dass die Magneten (Y) nach oben zeigen.
2. Den Filter von unten auf den Lüfter aufsetzen. Durch die Magneten haftet dieser an der Metallplatte.

### Hinweise

Vor dem Einsetzen sicherstellen, dass der Druckkopf beim Einbau nicht beschädigt werden kann. Den Druckkopf ggf. mittelsin Steuerungstasten in eine unbedenkliche Position fahren.